


USER INSTRUCTIONS

SR100/SR200 TEST ADAPTOR

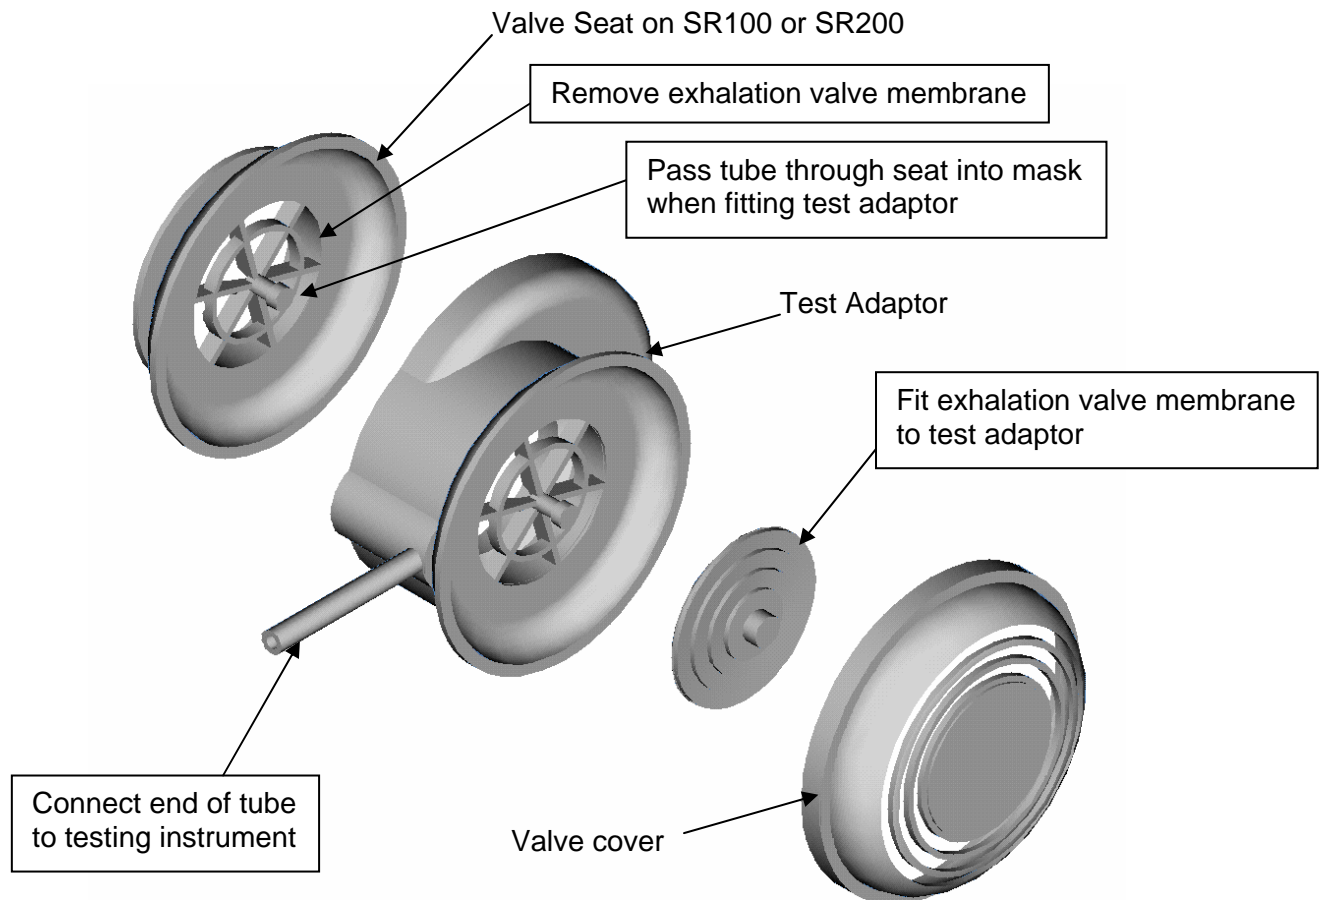

EXPLODED VIEW OF PARTS

The SR100 Test Adaptor is used to connect the SR100 half mask or SR200 full face mask to a measuring instrument for facial fit testing. The adaptor is fitted to an exhalation valve of the SR100 or SR200.

Procedure:

1. Remove cover on one exhalation valve;
2. Remove the valve membrane and inspect it to ensure it is clean and in good condition;
3. Fit the adaptor to the valve seat so that the hose passes through the valve and into the mask. The outer end of the hose should point downwards;
4. Fit the valve membrane to the valve seat in the adaptor, ensuring first that the seat is clean;
5. Fit the valve cover;
6. Check that the internal hose does not contact the user's face when wearing the mask;
7. If testing the facial fit using test disc 322, the adaptor tube must first be blocked.

The adaptor hose can now be connected to the testing instrument. Connect the adaptor to the other exhalation valve to test the performance of both valves.

WARNING: This product is intended for use only for facial fit testing under test conditions. Not for use under real working conditions.